

MATRIXES · HDMI MATRIX SWITCHER

BLU-HDM2-88AD

18Gbps 8x8 HDMI Matrix with ARC Function

Transmission of video (up to 4K2K@60Hz YUV 4:4:4) and multi-channel high resolution digital audio from 8 HDMI sources to 8 HDMI displays. Audio de-embedded to analog and coaxial audio from 8 HDMI output ports. Each HDMI output supports 4K2K to 1080P downscaler independently. Control is via front panel buttons, IR remote, RS-232, LAN and Web GUI.



8 x 8

HDMI MATRIX

18Gbps

VIDEO BANDWIDTH

4K2K@60Hz

YUV 4:4:4

HDCP 2.2

AND HDCP 1.4

ARC

CEC / EDID

SPECIFICATION SUMMARY

Matrix	8 x 8	Input Ports	8×HDMI, 1×IR EXT
HDMI Compliance	HDMI 2.0b	Output Ports	8×HDMI, 8×Coax, 8×L/R
HDCP Compliance	HDCP 2.2 and HDCP 1.4	Control	Panel, IR, RS-232, LAN, Web GUI
Video Bandwidth	18Gbps	Display	Front panel OLED
Video Resolution	Up to 4K2K@50/60Hz (4:4:4)	Housing	Metal Enclosure, Black
Down Scaler	4K->1080P, each output	Dimensions	440x200x44.5mm
HDR	HDR10, HDR10+, Dolby Vision, HLG	Weight	2.8kg
Audio de-embed	Analog + Coax	Power	DC 12V/5A, 43W
ARC / CEC / EDID	Supported	Operating Temp.	-10°C ~ 45°C


CONTENTS

01	Overview & Package Contents	02
02	Specifications	03
03	Front Panel	04
04	Rear Panel	05
05	IR Remote & IR Cable	06
06	EDID Management	07
07	Web GUI User Guide	08
08	RS-232 Control Command	12
09	Application Example	15

KEY FEATURES

- HDMI 2.0b, HDCP 2.2 and HDCP 1.4 compliant
- Support 18Gbps video bandwidth
- Dolby Vision, HDR10+ and HLG are supported
- ARC, CEC and smart EDID management

While HDMI output ARC function is enabled, the ARC audio from HDMI display devices will be extracted to coaxial audio output. Each HDMI output of this 8x8 HDMI Matrix supports 4K2K to 1080P downscaler independently.

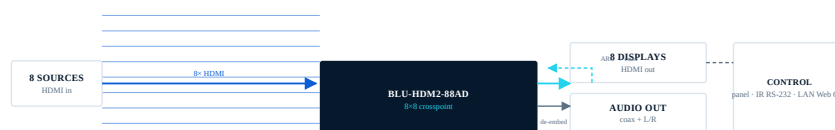

ROUTING · 8 SOURCES, 8 DISPLAYS, AUDIO DE-EMBED, FIVE WAYS TO CONTROL

01 Overview

What the matrix does, what it carries, and how it is driven.

The 18Gbps 8x8 HDMI Matrix supports the transmission of video (up to 4K2K@60Hz YUV 4:4:4) and multi-channel high resolution digital audio from 8 HDMI sources to 8 HDMI displays. Audio de-embedded to analog and coaxial audio is supported from 8 HDMI output ports. While HDMI output ARC function is enabled, the ARC audio from HDMI display devices will be extracted to coaxial audio output. Each HDMI output of this 8x8 HDMI Matrix supports 4K2K to 1080P downscaler independently. Control is via front panel buttons, IR remote, RS-232, LAN and Web GUI.

FEATURES

- HDMI 2.0b, HDCP 2.2 and HDCP 1.4 compliant
- Video resolution up to 4K2K@60Hz (YUV 4:4:4) on all HDMI ports
- Support 18Gbps video bandwidth
- Dolby Vision, HDR10+ and HLG are supported.
- Support 4K->1080P Down Scaler for each output port
- HDMI audio pass-through up to 7.1CH HD audio (LPCM, Dolby TrueHD and DTS-HD Master Audio)
- Audio de-embedded is supported via analog and coax ports
- ARC, CEC and smart EDID management are supported
- 1U rack mounted design with front panel OLED display
- Control via front panel buttons, IR remote, RS-232, LAN and Web GUI

PACKAGE CONTENTS

- | | |
|---|---|
| 1 | 1 x 18Gbps 8 x 8 HDMI Matrix |
| 2 | 1 x 12V/5A Power Adapter |
| 3 | 1 x IR Remote |
| 4 | 1 x IR Receiver cable (1.5 meters) |
| 5 | 1 x RS-232 serial cable (1.5 meters, male to female head) |
| 6 | 2 x Mounting Ear |
| 7 | 1 x User Manual |

02 Specifications

Full technical, connection, mechanical and environmental figures.

TECHNICAL

HDMI Compliance	HDMI 2.0b
HDCP Compliance	HDCP 2.2 and HDCP 1.4
Video Bandwidth	18Gbps
Video Resolution	Up to 4K2K@50/60Hz (4:4:4)
Color Space	RGB, YCbCr 4:4:4/4:2:2/4:2:0
Color Depth	8-bit, 10-bit, 12-bit
HDMI Audio Formats (Pass-through)	LPCM 2/5.1/7.1, Dolby Digital, DTS 5.1, Dolby Digital+, Dolby TrueHD, DTS-HD Master Audio, Dolby Atmos, DTS:X
Coax Audio Formats	LPCM 2.0, Dolby Digital / Plus, DTS 5.1
L/R Audio Formats	PCM2.0
HDR formats	HDR10, HDR10+, Dolby Vision, HLG
ESD Protection	Human-body Model: ±8kV (Air-gap discharge), ±4kV (Contact discharge)

CONNECTIONS

Input Ports	8×HDMI Type A [19-pin female] 1×IR EXT [3.5mm Stereo Mini- jack]
Output Ports	8×HDMI Type A [19-pin female] 8×Coax Audio (RCA) 8×L/R Audio [3.5mm Stereo Mini- jack]
Control Ports	1×TCP/IP [RJ45] 1×RS-232 [D-Sub 9]

MECHANICAL

Housing	Metal Enclosure
Color	Black
Dimensions	440mm (W)×200mm (D) ×44.5mm (H)
Weight	2.8kg

POWER

Power Supply	Input: AC 100 - 240V 50/60Hz Output: DC 12V/5A (US/EU standard, CE/FCC/UL certified)
Power Consumption	43W

ENVIRONMENT

Operating Temperature	-10°C ~ 45°C / 14°F ~ 113°F
Storage Temperature	-20°C ~ 60°C / -4°F ~ 140°F
Relative Humidity	20~90% RH (non-condensing)


RESOLUTION / CABLE LENGTH

4K60	16ft / 5M
4K30	32ft / 10M
1080P60	50ft / 15M

The use of "Premium High Speed HDMI" cable is highly recommended.

03 Front panel


Controls and indicators, and what the MENU group does.

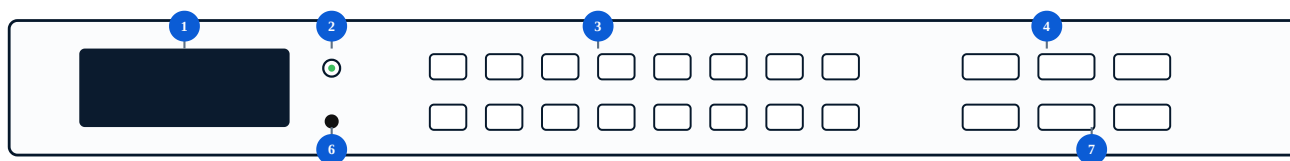

- | | |
|--|---|
| <p>1 OLED screen</p> <p>2 Power LED</p> <p>3 Input / Output buttons</p> <p>4 MENU / ENTER / UP / DOWN</p> <p>5 POWER button</p> <p>6 IR Window</p> <p>7 LOCK button</p> | <p>Display matrix switching status, input / output port, EDID, Baud rate, IP Address.</p> <p>The LED will illuminate in green when the product is connected to power supply, and red when the product is on standby.</p> <p>You need to press an output button (1~8) firstly and then press an input button (1~8) to select the corresponding input source for the output port.</p> <p>EDID Check: On the initial OLED display screen, press "MENU" button to enter the Matrix switching state interface, then press "UP/DOWN" button to check the current EDID information of each HDMI input port. EDID setting: On the initial OLED display screen, press "MENU" button to enter the EDID setting interface, press "UP/DOWN" button to select the required EDID, and press the "ENTER" button. A prompt "copy to input :" will appear. Then press "UP/DOWN" button to select the input port you need to set, and press "ENTER" button again to confirm. Baud rate setting: On the initial OLED display screen, press "MENU" button to enter the Baud rate interface, and press "UP/DOWN" button to select the required Baud rate, finally press the "ENTER" button to confirm the setting. IP Address Check: On the initial OLED display screen, press "MENU" button to enter the IP interface, then press "UP/DOWN" button to check the current IP address. Pressing the "MENU" button again will return to the initial OLED display status.</p> <p>Long press the POWER button for 3 seconds to enter the standby mode, then short press it to wake up the device.</p> <p>IR receiver window, it only receives the IR remote signal from this product.</p> <p>Short press the LOCK button to lock front panel buttons (Except the power button); Press it again to unlock.</p> |
|--|---|

04 Rear panel

Every connector on the back of the unit.

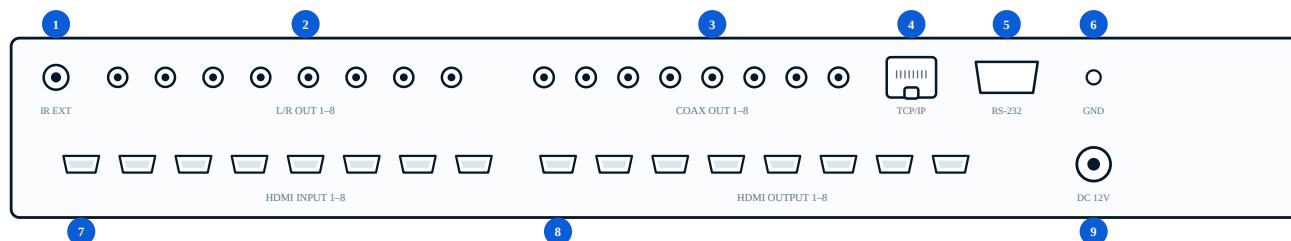

- | | | |
|----------|---------------------------|---|
| 1 | IR EXT | If the IR receiver window of the unit is blocked or the unit is installed in a closed area out of infrared line of sight, the IR receiver cable can be inserted to the "IR EXT" port to receive the IR remote signal. |
| 2 | L/R OUT (1-8) | Analog audio output port, connect to an amplifier or speaker via a 3.5mm audio cable. |
| 3 | COAX OUT (1-8) | Coaxial audio output port, connect to audio output device such as audio amplifier via a coaxial cable. |
| 4 | TCP/IP port | TCP/IP control port, connect to PC or router with an RJ45 cable. |
| 5 | RS-232 port | Connect to a PC or control system by D-Sub 9-pin cable to transmit RS-232 command. |
| 6 | GND | Connect the housing to the ground. |
| 7 | INPUT ports (1-8) | HDMI input ports, connect to HDMI source device such as DVD or set-top box with an HDMI cable. |
| 8 | OUTPUT ports (1-8) | HDMI output ports, connect to HDMI display device such as TV or monitor with an HDMI cable. |
| 9 | DC 12V | Connect to 12V/5A power adapter. |

05 IR Remote

Remote functions and the two ways to receive the IR signal.

1	Power on or Standby	Power on the Matrix or set it to standby mode.
2	Input 1/2/3/4/5/6/7/8	Select input source button. ◀ ▶ : Select the last or next input source button.
3	Output 1/2/3/4/5/6/7/8	Select output source button.
	All	Select all output source simultaneously. For example, when you press the "All" button and then press input "1" button, at this time the input "1" source will output to all display devices.

Operation instruction: You need to press the output button firstly and then press input button to select the corresponding input source. For example, Press Output-X (X means output button from 1 to 8, including "All" button) then press Input-Y (Y means input button from 1 to 8).

THE FIRST WAY

The IR window accepts the IR remote signal. When using the IR remote, the furthest distance is 7 meters and the angle is $\pm 45^\circ$.

THE SECOND WAY

If the IR receiver window of the Matrix is blocked or the Matrix is installed in a closed area out of infrared line of sight, the IR receiver cable can be inserted to the "IR EXT" port to receive the IR remote signal. The furthest distance of using the IR remote is 7 meters and the IR remote is directly faced to the IR receiver head.

IR Cable Pin Assignment

1	IR Signal	IR signal pin.
2	Power	Power pin.
3	Grounding	Grounding pin.

06 EDID Management

This Matrix has 21 factory defined EDID settings, 2 user-defined EDID modes and 8 copy EDID modes.

ON-PANEL BUTTON OPERATION

On the initial OLED display screen, press "MENU" button to enter the EDID setting interface, press "UP/DOWN" button to select the required EDID, and press the "ENTER" button. A prompt "copy to input :" will appear. Then press "UP/DOWN" button to select the input port you need to set, and press "ENTER" button again to confirm this operation.

RS-232 CONTROL OPERATION

Connect the Matrix to PC with a serial cable, then open a Serial Command tool on PC to send ASCII command `s edid in x from z!` to set EDID. For details, please refer to "EDID Setting" in the ASCII command list of "RS-232 Control Command".

WEB GUI OPERATION

Please check the EDID management in the "Input page" of "Web GUI User Guide". You can select defined EDID mode or copy EDID mode to input port through front panel buttons, RS-232 control or Web GUI.

The defined EDID setting list of the product is shown below.
Modes 1–21 are factory defined, 22–23 are user-defined, and 24–31 copy the EDID from HDMI output 1–8.

THE DEFINED EDID SETTING LIST

EDID MODE	EDID DESCRIPTION	EDID MODE	EDID DESCRIPTION
1	1080p, Stereo Audio 2.0	17	4K2K60_444, Dolby/DTS 5.1
2	1080p, Dolby/DTS 5.1	18	4K2K60_444, HD Audio 7.1
3	1080p, HD Audio 7.1	19	4K2K60_444, Stereo Audio 2.0 HDR
4	1080i, Stereo Audio 2.0	20	4K2K60_444, Dolby/DTS 5.1 HDR
5	1080i, Dolby/DTS 5.1	21	4K2K60_444, HD Audio 7.1 HDR
6	1080i, HD Audio 7.1	22	USER1
7	3D, Stereo Audio 2.0	23	USER2
8	3D, Dolby/DTS 5.1	24	Copy from hdmi output 1
9	3D, HD Audio 7.1	25	Copy from hdmi output 2
10	4K2K30_444, Stereo Audio 2.0	26	Copy from hdmi output 3
11	4K2K30_444, Dolby/DTS 5.1	27	Copy from hdmi output 4
12	4K2K30_444, HD Audio 7.1	28	Copy from hdmi output 5
13	4K2K60_420, Stereo Audio 2.0	29	Copy from hdmi output 6
14	4K2K60_420, Dolby/DTS 5.1	30	Copy from hdmi output 7
15	4K2K60_420, HD Audio 7.1	31	Copy from hdmi output 8
16	4K2K60_444, Stereo Audio 2.0		

07 Web GUI User Guide

The Matrix can be controlled by Web GUI. The operation method is shown below.

Step 1: Get the current IP Address. The default IP address is 192.168.1.100. You can get the current Matrix IP address in two ways. **The first way:** get the IP address via panel buttons — on the initial OLED display, press “MENU” button to enter the IP interface, then press “UP/DOWN” button to check the current IP address. **The second way:** get the IP address via RS-232 control — send the command `r ipconfig!` through an ASCII Command tool, then you'll get the feedback information (IP Mode, IP, Subnet Mask, Gateway, TCP/IP port, Telnet port, Mac address).

Step 2: Connect the TCP/IP port of the Matrix to a PC with an UTP cable, and set the IP address of the PC to be in the same network segment with the Matrix.

Step 3: Input the IP address of the Matrix into your browser on the PC to enter Web GUI page. After entering the Web GUI page, there will be a Login page. Select the Username from the list and enter the password. The default passwords are: Username **User / Admin**, Password **user / admin**.

Status Page

The Status page provides basic information about the Model, the installed firmware version and the network settings of the device.

Video Page

You can do the following operations on the Video page:

Output	The current device's OUTPUT port. You can select signal source for it.
Input	You can click the drop-down menu to select signal source for the corresponding OUTPUT port.
Presets Name	You can name the current scene with maximum length of 12 characters (Chinese name is unsupported).
Presets Set	You can restore the settings of the last saved audio-video matrix switching relationship.
Presets Save	You can save audio-video matrix switching relationship.
Presets Clear	You can clear the saved audio-video matrix switching relationship.

Input Page

You can do the following operations on the Input page:

Inputs	Input channel of the device.
Active	It indicates whether the channel is connected to a signal source.
Name	The input channel's name. You can modify it by entering the corresponding name (max length: 12 characters) in the input box (Chinese name is unsupported).
EDID	You can set the current channel's EDID.

Set EDID for the User

Click the "Browse" button, then select the bin file. If you select the wrong EDID file, there will be a prompt "invalid EDID file". Make sure to select the correct file, then you can check the name of the selected file. Select "User 1" or "User 2", then click "Upload". After successful setting, it will prompt "Upload Successful!".

Download the EDID File of the Corresponding Input Channel

Click the drop-down box of "Select EDID File" to select the corresponding input channel. Then click "Download" to download the corresponding EDID file.

Output Page

You can do the following operations on the Output page:

Outputs	Output channel of the device.
Name	The current output channel's name. You can modify it by entering the corresponding name (max length: 12 characters) in the input box (Chinese name is unsupported).
Cable	It indicates the connection status of output ports. When the output port is connected to the display, it shows green, otherwise, it shows gray.
Scaler Mode	Set the current output resolution mode.
ARC	Turn on/off the ARC function.
Stream	Turn on/off the output stream.

CEC Page

You can perform CEC management on this page:

Input Control	You can control the operation of each input source by clicking the icons on the page.
Output Control	You can control the operation of each display, such as power on/off, volume +/-, active source switching.

Network Page

Set the Default Network: Click "Set Network Defaults", there will be a prompt "Reset All Network Configuration to Factory Default?". Click "OK" to search the IP Address again. After searching is completed, it will switch to the login page.

Modify Username: Click the "User" button, enter the correct Old Password, New Password, and Confirm Password, then click "Save". After successful modification, there will be a prompt "modify successfully". **Note** — input rules for changing passwords: (1) The password can't be empty. (2) New Password can't be the same as Old Password. (3) New Password and Confirm Password must be the same.

Modify Network Setting: Modify the Mode/IP Address/Gateway/Subnet Mask/Telnet Port as required, click "Save" to save the settings, then it will come into effect. After modification, if the Mode is "Static", it will switch to the corresponding IP Address; if the Mode is "DHCP", it will automatically search and switch to the IP Address assigned by the router.

System Page

Panel Lock	Click "Panel Lock" to lock/unlock panel buttons. "On" indicates that panel buttons are unavailable; "Off" indicates panel buttons are available.
Beep	Click "Beep" to turn on/off the beep.
LCD	You can turn on/off the LCD, and set the turn-on time (15s/30s/60s).
Serial Baud Rate	Click the value to set the Serial Baud Rate.
Firmware Update	Click "Browse" to select the update file, then click "Update" to complete firmware update.
Factory Reset	You can reset the unit to factory defaults by clicking "Reset".
Reboot	You can reboot the unit by clicking "Reboot". Note: After reset/reboot, it will switch to the login page.

Screenshots. The original manual illustrates each Web GUI page with a screenshot. Those images are not embedded in the supplied source file; if you provide the GUI screenshots as image files, they will be placed here as-is.

08 RS-232 Control Command

Serial port protocol — Baud rate: 115200, Data bits: 8bit, Stop bits: 1, Check bit: 0. In the commands: x = Parameter 1, y = Parameter 2, != Delimiter.

COMMAND CODE	FUNCTION DESCRIPTION	EXAMPLE	FEEDBACK	DEFAULT
POWER				
s power z!	Power on/off the device, z=0~1 (z=0 power off, z=1 power on)	s power 1!	Power on / System Initializing... / Initialization Finished! / power off	power on
r power!	Get current power state	r power!	power on / power off	
s reboot!	Reboot the device	s reboot!	Reboot... / System Initializing... / Initialization Finished! / FW version x.xx.xx	
SYSTEM SETUP				
help!	List all commands	help!		
r type!	Get device model	r type!	BLU-HDM2-88AD	
r status!	Get device current status	r status!	Get the unit all status: power, beep, lock, in/out connection, video/audio crosspoint, edid, scaler, network status	
r fw version!	Get Firmware version	r fw version!	MCU BOOT: Vx.xx.xx / MCU APP: Vx.xx.xx / WEB GUI: Vx.xx	
r link in x!	Get the connection status of the x input port, x=0~8 (0=all)	r link in 1!	hdmi input 1: connect	
r link out y!	Get the connection status of the y output port, y=0~8 (0=all)	r link out 1!	hdmi output 1: connect	
s reset!	Reset to factory defaults	s reset!	Reset to factory defaults / System Initializing... / Initialization Finished! / FW version x.xx.xx	
s beep z!	Enable/Disable buzzer function, z=0~1 (z=0 beep off, z=1 beep on)	s beep 1!	beep on / beep off	beep on
r beep!	Get buzzer state	r beep!	beep on / beep off	
s lock z!	Lock/Unlock front panel button, z=0~1 (z=0 lock off, z=1 lock on)	s lock 1!	panel button lock on / panel button lock off	panel button lock off
r lock!	Get panel button lock state	r lock!	panel button lock on/off	
s lcd on time z!	Set LCD screen remain on time, z=0~4 (0:off, 1:always on, 2:15s, 3:30s, 4:60s)	s lcd on time 1!	lcd on 15 seconds	lcd on 30 seconds
r lcd mode!	Get the backlight status of lcd screen	r lcd mode!	lcd always on	
s save preset z!	Save switch state between all output port and the input port to preset z, z=1~8	s save preset 1!	save to preset 1	
s recall preset z!	Call saved preset z scenarios, z=1~8	s recall preset 1!	recall from preset 1	
s clear preset z!	Clear stored preset z scenarios, z=1~8	s clear preset 1!	clear preset 1	
r preset z!	Get preset z information, z=1~8	r preset 1!	video/audio crosspoint	
s logo1 *****!	Set the logo name displayed on the first line of LCD screen, the max character is 16	s logo1 Initializing...!	logo1:Initializing...	
s logo2 *****!	Set the logo name displayed on the second line of LCD screen, the max character is 16	s logo2 BLU-HDM2-88AD!	logo2 BLU-HDM2-88AD!	
s baud rate xxx!	Set the serial port baud rate of RS02 module, z= (115200,57600,38400,19200,9600,4800)	s baud rate 115200!	Baudrate:115200	115200
r baud rate!	Get the serial port baud rate of RS02 module	r baud rate!	Baudrate:115200	
s id z!	Set the control ID of the product, z=000~999	s id 888!	id 888!	0
OUTPUT SETTING				
s in x av out y!	Set input x to output y, x=1~8, y=0~8 (0=all)	s in 1 av out 2!	input 1 -> output 2	PTP
r av out y!	Get output y signal status y=0~8 (0=all)	r av out 0!	input 1 -> output 1 / input 2 -> output 2 / / input 8 -> output 8	
s hdmi y stream z!	Set output y stream on/off, y=0~8 (0=all) z=0~1 (0:disable,1:enable)	s hdmi 1 stream 1! / s hdmi 0 stream 1!	Enable hdmi output 1 stream / Disable hdmi output 1 stream / Enable hdmi all outputs stream / Disable hdmi all outputs stream	enable
r hdmi y stream!	Get output y stream status, y=0~8 (0=all)	r hdmi 1 stream!	Enable hdmi output 1 stream	

08 RS-232 Control Command (continued)


COMMAND CODE	FUNCTION DESCRIPTION	EXAMPLE	FEEDBACK	DEFAULT
s hdmi y scaler z!	Set hdmi output y port output scaler mode, y=0~8 (0=all), z=1~3 (1=bypass, 2=4k->1080p, 3=Auto)	s hdmi 1 scaler 1! / s hdmi 0 scaler 1!	hdmi output 1 set to bypass mode / hdmi all outputs set to bypass mode	hdmi all outputs set to bypass mode
r hdmi y scaler!	Get hdmi output y port output mode y=0~8 (0=all)	r hdmi 1 scaler !	hdmi output 1 set to bypass mode	
EDID SETTING				
s edid in x from z!	Set input x EDID from default EDID z, x=0~8 (0=all) z=1~31. 1: 1080p, Stereo Audio 2.0 / 2: 1080p, Dolby/DTS 5.1 / 3: 1080p, HD Audio 7.1 / 4: 1080i, Stereo Audio 2.0 / 5: 1080i, Dolby/DTS 5.1 / 6: 1080i, HD Audio 7.1 / 7: 3D, Stereo Audio 2.0 / 8: 3D, Dolby/DTS 5.1 / 9: 3D, HD Audio 7.1 / 10: 4K2K30_444, Stereo Audio 2.0 / 11: 4K2K30_444, Dolby/DTS 5.1 / 12: 4K2K30_444, HD Audio 7.1 / 13: 4K2K60_420, Stereo Audio 2.0 / 14: 4K2K60_420, Dolby/DTS 5.1 / 15: 4K2K60_420, HD Audio 7.1 / 16: 4K2K60_444, Stereo Audio 2.0 / 17: 4K2K60_444, Dolby/DTS 5.1 / 18: 4K2K60_444, HD Audio 7.1 / 19: 4K2K60_444, Stereo Audio 2.0 HDR / 20: 4K2K60_444, Dolby/DTS 5.1 HDR / 21: 4K2K60_444, HD Audio 7.1 HDR / 22: User1 / 23: User2 / 24~31: copy from hdmi output 1~8	s edid in 1 from 1! / s edid in 0 from 1!	input 1 EDID: 1080p, Stereo Audio 2.0 / all inputs EDID: 1080p, Stereo Audio 2.0	1080p, Stereo Audio 2.0
r edid in x!	Get EDID status of the input x, x=0~8 (0=all input)	r edid in 0!	input 1 EDID: 4K2K60_444, Stereo Audio 2.0 / / input 8 EDID: 4K2K60_444, Stereo Audio 2.0	
r edid data hdmi y!	Get the EDID data of the hdmi output y port, y=1~8	r edid data hdmi 1!	EDID: 00 FF FF FF FF FF FF 00	
AUDIO SETTING				
s hdmi y arc z!	Turn on/off ARC of HDMI output y, y=0~8 (0=all) z=0~1 (z=0 off, z=1 on)	s hdmi 1 arc 1! / s hdmi 0 arc 1!	hdmi output 1 arc on / hdmi output 1 arc off / hdmi all outputs arc on / hdmi all outputs arc off	off
r hdmi y arc!	Get the ARC state of HDMI output y, y=0~8 (0=all)	r hdmi 1 arc!	hdmi output 1 arc on	
CEC SETTING				
s cec in x on!	set input x power on by CEC, x=0~8 (0=all input)	s cec in 1 on!	input 1 power on	
s cec in x off!	set input x power off by CEC, x=0~8 (0=all input)	s cec in 1 off!	input 1 power off	
s cec in x menu!	set input x open menu by CEC, x=0~8 (0=all input)	s cec in 1 menu!	input 1 open menu	
s cec in x back!	set input x back operation by CEC, x=0~8 (0=all input)	s cec in 1 back!	input 1 back operation	
s cec in x up!	set input x menu up operation by CEC, x=0~8 (0=all input)	s cec in 1 up!	input 1 menu up operation	
s cec in x down!	set input x menu down operation by CEC, x=0~8 (0=all input)	s cec in 1 down!	input 1 menu down operation	
s cec in x left!	set input x menu left operation by CEC, x=0~8 (0=all input)	s cec in 1 left!	input 1 menu left operation	
s cec in x right!	set input x menu right operation by CEC, x=0~8 (0=all input)	s cec in 1 right!	input 1 menu right operation	
s cec in x enter!	set input x menu enter by CEC, x=0~8 (0=all input)	s cec in 1 enter!	input 1 menu enter operation	
s cec in x play!	set input x play by CEC, x=0~8 (0=all input)	s cec in 1 play!	input 1 play operation	
s cec in x pause!	set input x pause by CEC, x=0~8 (0=all input)	s cec in 1 pause!	input 1 pause operation	
s cec in x stop!	set input x stop by CEC, x=0~8 (0=all input)	s cec in 1 stop!	input 1 stop operation	
s cec in x rew!	set input x rewind by CEC, x=0~8 (0=all input)	s cec in 1 rew!	input 1 rewind operation	
s cec in x mute!	set input x volume mute by CEC, x=0~8 (0=all input)	s cec in 1 mute!	input 1 volume mute	
s cec in x vol-!	set input x volume down by CEC, x=0~8 (0=all input)	s cec in 1 vol-!	input 1 volume down	
s cec in x vol+!	set input x volume up by CEC, x=0~8 (0=all input)	s cec in 1 vol+!	input 1 volume up	
s cec in x ff!	set input x fast forward by CEC, x=0~8 (0=all input)	s cec in 1 ff!	input 1 fast forward operation	
s cec in x previous!	set input x previous by CEC, x=0~8 (0=all input)	s cec in 1 previous!	input 1 previous operation	
s cec in x next!	set input x next by CEC, x=0~8 (0=all input)	s cec in 1 next!	input 1 next operation	
s cec hdmi out y on!	set output y power on by CEC, y=0~8 (0=all output)	s cec hdmi out 1 on!	hdmi output 1 power on	
s cec hdmi out y off!	set output y power off by CEC, y=0~8 (0=all output)	s cec hdmi out 1 off!	hdmi output 1 power off	

08 RS-232 Control Command (continued)

COMMAND CODE	FUNCTION DESCRIPTION	EXAMPLE	FEEDBACK	DEFAULT
s cec hdmi out y mute!	set output y volume mute by CEC, y=0-8 (0=all output)	s cec hdmi out 1 mute!	hdmi output 1 volume mute	
s cec hdmi out y vol-!	set output y volume down by CEC, y=0-8 (0=all output)	s cec hdmi out 1 vol-!	hdmi output 1 volume down	
s cec hdmi out y vol+!	set output y volume up by CEC, y=0-8 (0=all output)	s cec hdmi out 1 vol+!	hdmi output 1 volume up	
s cec hdmi out y active!	set output y active source by CEC, y=0-8 (0=all output)	s cec hdmi out 1 active!	hdmi output 1 active source	
NETWORK SETTING				
r ipconfig!	Get the Current IP Configuration	r ipconfig!	IP Mode: Static / IP: 192.168.1.72 / Subnet Mask: 255.255.255.0 / Gateway: 192.168.1.1 / TCP/IP port=8000 / Telnet port=10 / Mac address: 00:1C:91:03:80:01	
r mac addr!	Get network MAC address	r mac addr!	Mac address: 00:1C:91:03:80:01	
s ip mode z!	Set network IP mode to static IP or DHCP, z=0~1 (z=0 Static, z=1 DHCP)	s ip mode 0!	Set IP mode:Static (Please use "s net reboot!" command or repower device to apply new config!)	
r ip mode!	Get network IP mode	r ip mode!	IP Mode: Static	
s ip addr xxx.xxx.xxx.xxx!	Set network IP address	s ip addr 192.168.1.100!	Set IP address: 192.168.1.100 (Please use "s net reboot!" command or repower device to apply new config!) / DHCP on, Device can't config static address, set DHCP off first.	
r ip addr!	Get network IP address	r ip addr!	IP address: 192.168.1.100	
s subnet xxx.xxx.xxx.xxx!	Set network subnet mask	s subnet 255.255.255.0!	Set subnet Mask: 255.255.255.0 (Please use "s net reboot!" command or repower device to apply new config!) / DHCP on, Device can't config subnet mask, set DHCP off first.	
r subnet!	Get network subnet mask	r subnet!	Subnet Mask: 255.255.255.0	
s gateway xxx.xxx.xxx.xxx!	Set network gateway	s gateway 192.168.1.1!	Set gateway: 192.168.1.1 (Please use "s net reboot!" command or repower device to apply new config!) / DHCP on, Device can't config gateway, set DHCP off first.	
r gateway!	Get network gateway	r gateway!	Gateway: 192.168.1.1	
s tcp/ip port x!	Set network TCP/IP port (x=1~65535)	s tcp/ip port 8000!	Set TCP/IP port:8000	
r tcp/ip port!	Get network TCP/IP port	r tcp/ip port!	TCP/IP port:8000	
s telnet port x!	Set network telnet port (x=1~65535)	s telnet port 23!	Set Telnet port:23	
r telnet port!	Get network telnet port	r telnet port!	Telnet port:23	
s net reboot!	Reboot network modules	s network reboot!	Network reboot... / IP Mode: Static / IP: 192.168.1.72 / Subnet Mask: 255.255.255.0 / Gateway: 192.168.1.1 / TCP/IP port=8000 / Telnet port=10 / Mac address: 00:1C:91:03:80:01	

09 Application Example

Eight sources into the matrix, eight displays out, audio broken out, driven over the network.

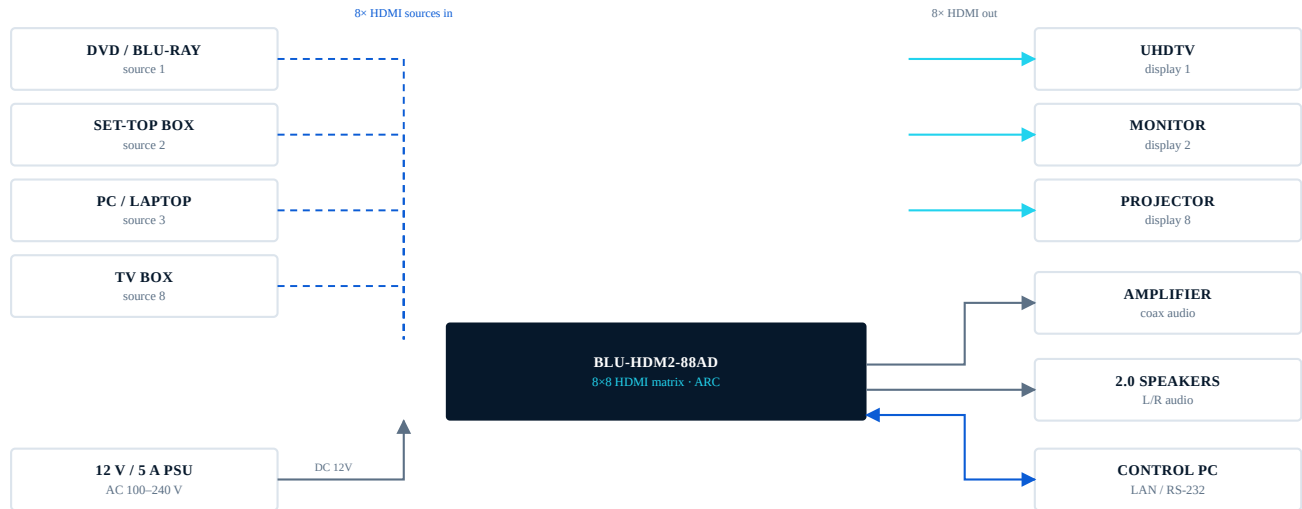

Audio de-embedded to analog and coaxial audio is supported from 8 HDMI output ports. While HDMI output ARC function is enabled, the ARC audio from HDMI display devices will be extracted to coaxial audio output.

Each HDMI output of this 8x8 HDMI Matrix supports 4K2K to 1080P downscaler independently.

ORDERING

BLU-HDM2-88AD

18Gbps 8x8 HDMI Matrix with ARC Function

bluKnot

The terms HDMI and HDMI High-Definition Multimedia interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries. BluKnot is a registered trademark of Bronx Systems India Private Limited.

www.bronx.co.in · admin@bronx.co.in · sales@bronx.co.in